

# VWP

## Mounting Instructions

### PARTS YOU NEED



1/2" Concrete Drill Bit

2x



3/8" internal threaded anchor

2x



3/8" Hex Bolt

2x




Flat washer



VISION ENGINEERING  
INTELLIGENT LIGHTING SOLUTIONS


1

Drill two 1/2" holes 12" apart.

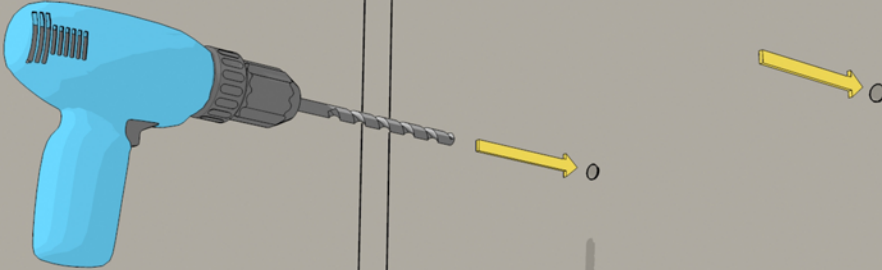


2

Insert a 3/8" internal threaded anchor in each 1/2" hole.

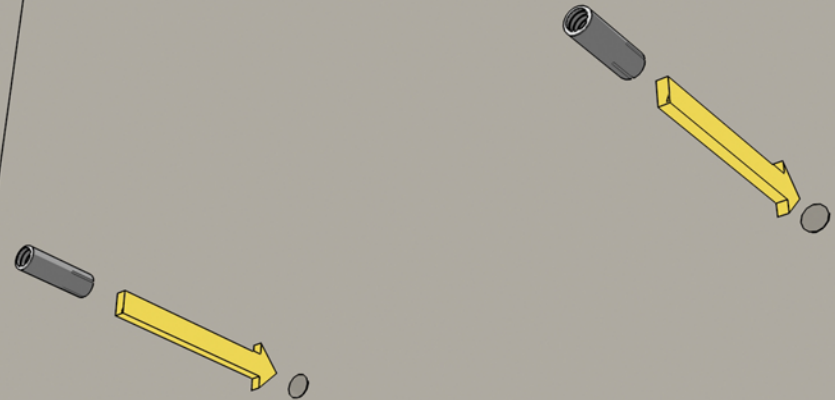

3

Screw bolts with washers through holes in VWP.

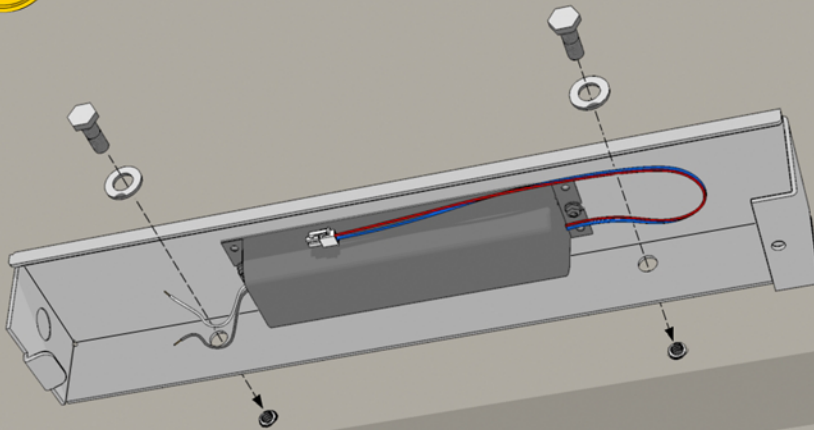

4

Attach frame assembly to driver enclosure.

