

PRI – Precision Reflective Illumination

No Glare. Brighter. Less Energy

Engineered specifically for reach-in cooler doors, delivering maximum visibility with minimum energy use.



Key Value Points

- **Universal SKU** – supports both top and bottom frame entry.
- **Fewer part numbers** – simplifies inventory and procurement.
- **Flexible installation** – adapts to multiple OEM designs.
- **Future-ready** – relamp in just 30 seconds



PRI – Precision Reflective Illumination

PRI™ is a trademark of Vision Engineering Inc. Patent pending.

Product Overview:

PRI (Precision Reflective Illumination) is an advanced cone-shaped reflector designed for superior light performance. With an exceptional 98% reflective surface, **PRI** ensures optimal light distribution and clarity for various applications.

Key Features:

- High Reflectivity:** 98% reflective surface for maximum light output.
- Uniform Illumination:** Delivers an impressive 1.1 uniformity across the target area.
- Compact Design:** Small form factor, ideal for installation in, canopies, and vertical reach-in glass doors.
- Energy Efficient:** Achieves the highest lux levels in the industry with the lowest power consumption.
- SKU Efficiency:** Only one SKU needed to illuminate any cooler door
- Effortless Relamp:** Features its own plug and cord, allowing tool-free lamp replacement and the ability to power on either side for maximum convenience. (optional)
- Versatile Application:** Suitable for commercial lighting, retail displays, and any setting requiring precision illumination.
- Input Voltage:** 24V DC
- Power Options:** 3w, 6w, 9w, 12w, 15w.
- Color Temperatures:** 3500k, 4000k, 5000k, 6500k
- Size:** Ranging from 32.50" - 72.50"



CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.



Introducing the PRI Connector

Engineered for Pure Performance

PRI Connector, featuring **premium silver-plated terminals** for unmatched conductivity and durability. Our advanced silver-plated connectors are designed to deliver:

- **Low contact resistance** to reduce power loss and maintain system integrity
- **Exceptional corrosion resistance**, even in harsh or high-humidity environments
- **Long-term reliability** for mission-critical performance over years of use
- **Maximum electrical conductivity** for ultra-efficient signal transfer
- **Seal Tight** for a secure, moisture-resistant connection

⚡ Precision Meets Power

Every **PRI** Connector integrated into our LED fixture is a testament to American manufacturing excellence — engineered with tight tolerances, rugged housing, and a spec-locked design to ensure unwavering precision and maximum reflectivity in high-performance lighting systems.



Plug optional

**VISION
ENGINEERING**

PRI™ is a trademark of Vision Engineering Inc. Patent pending.



CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.

Relamp

This guide provides clear and concise instructions for installing the **PRI** fixture on your cooler door. With a quick and tool-free process, you can complete the installation in seconds.

Installation Steps

1.Snap the Fixture into Place:

1. Align the **PRI** fixture with the top center and bottom clips of the cooler door.
2. Gently snap the fixture into the clips.

2.Connect Power:

1. Insert the unique power plug designed specifically for the PRI fixture. (optional)

Completion Time

- The entire installation process takes approximately **30 seconds**.

No Tools Required

- No tools are necessary for installation, making relamping and fixture replacement quick and effortless for any future replacement.



PRI™ is a trademark of Vision Engineering Inc. Patent pending.




CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.

PRI – Precision Reflective Illumination

PRI™ is a trademark of Vision Engineering Inc. Patent pending.

SKU Efficiency: A single SKU illuminates an entire row of door openings, delivering exceptional value to store owners. (optional center mullion fixture available)

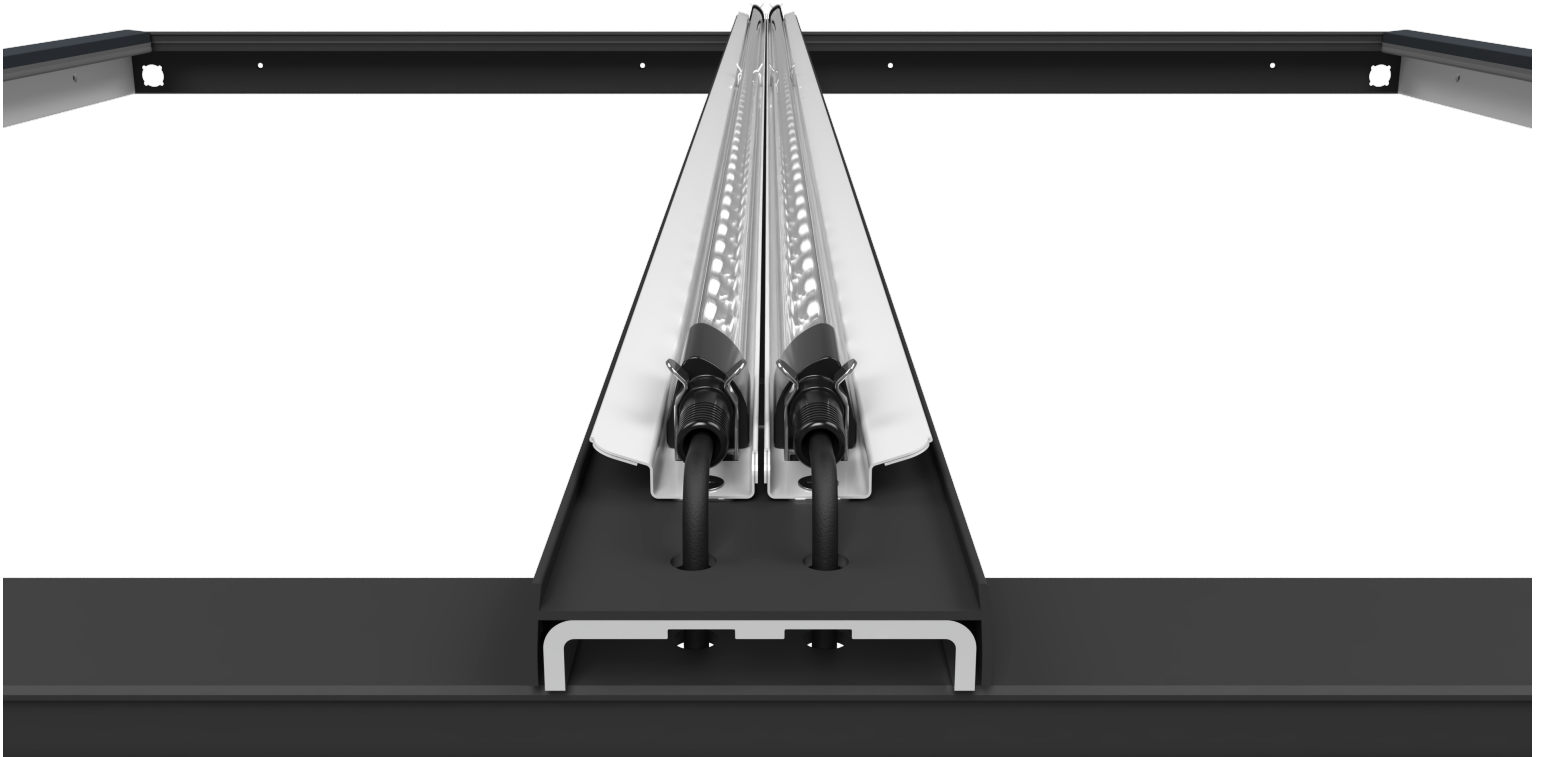


PRI™ is a trademark of Vision Engineering Inc. Patent pending.

CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.

PRECISION REFLECTIVE ILLUMINATION INSTALLATION

PRI™ is a trademark of Vision Engineering Inc. Patent pending.

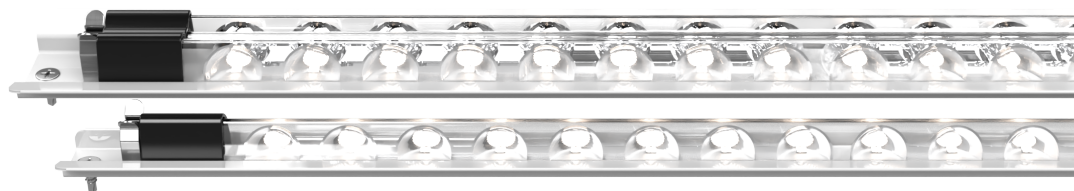


1

Place the PRI no-glare frame in position and fasten it with the provided self-drilling screws.




Tool required

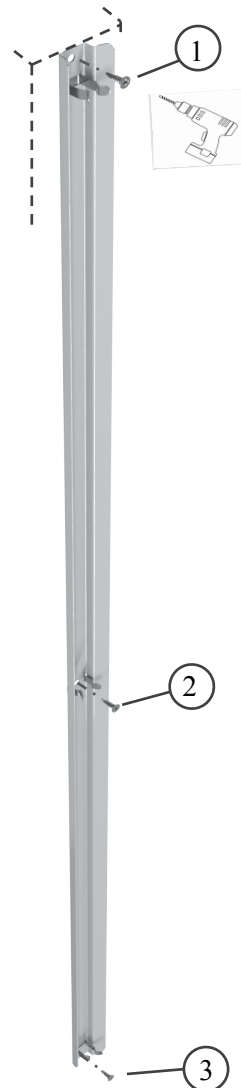

2

Align PRI fixture and snap into top, center, and bottom clips.

No tools required

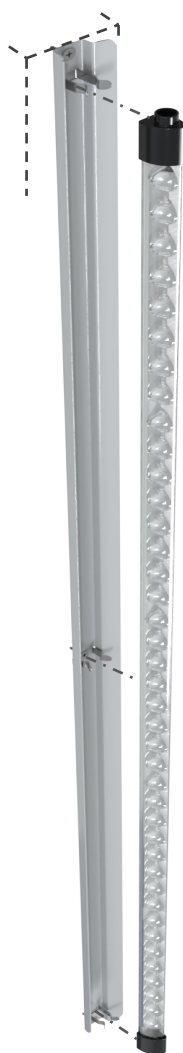


3

Plug in the PRI fixture using the provided power cord. No tools are required for future relamping.

No tools required



CAUTION



Connect red with red and black with black to avoid fixture shorting out

Power plug may be inserted from the top or bottom of fixture






Precision Reflective Illumination

PRI™ is a trademark of Vision Engineering Inc. Patent pending.



Product Specifications End Fixture

Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-3W-3500K-L4	3	.125A	3500	L4	405	36	36.5
PRI-6W-3500K-L4	6	.250A	3500	L4	810	36	36.5
PRI-9W-3500K-L4	9	.375A	3500	L4	1215	36	36.5
PRI-12W-3500K-L4	12	.500A	3500	L4	1620	36	36.5
PRI-3W-4000K-L4	3	.125A	4000	L4	405	36	36.5
PRI-6W-4000K-L4	6	.250A	4000	L4	810	36	36.5
PRI-9W-4000K-L4	9	.375A	4000	L4	1215	36	36.5
PRI-12W-4000K-L4	12	.500A	4000	L4	1620	36	36.5
PRI-3W-5000K-L4	3	.125A	5000	L4	405	36	36.5
PRI-6W-5000K-L4	6	.250A	5000	L4	810	36	36.5
PRI-9W-5000K-L4	9	.375A	5000	L4	1215	36	36.5
PRI-12W-5000K-L4	12	.500A	5000	L4	1620	36	36.5
PRI-3W-6500K-L4	3	.125A	6500	L4	405	36	36.5
PRI-6W-6500K-L4	6	.250A	6500	L4	810	36	36.5
PRI-9W-6500K-L4	9	.375A	6500	L4	1215	36	36.5
PRI-12W-6500K-L4	12	.500A	6500	L4	1620	36	36.5
Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-3W-3500K-L5	3	.125A	3500	L5	405	44	44.5
PRI-6W-3500K-L5	6	.250A	3500	L5	810	44	44.5
PRI-9W-3500K-L5	9	.375A	3500	L5	1215	44	44.5
PRI-12W-3500K-L5	12	.500A	3500	L5	1620	44	44.5
PRI-3W-4000K-L5	3	.125A	4000	L5	405	44	44.5
PRI-6W-4000K-L5	6	.250A	4000	L5	810	44	44.5
PRI-9W-4000K-L5	9	.375A	4000	L5	1215	44	44.5
PRI-12W-4000K-L5	12	.500A	4000	L5	1620	44	44.5
PRI-3W-5000K-L5	3	.125A	5000	L5	405	44	44.5
PRI-6W-5000K-L5	6	.250A	5000	L5	810	44	44.5
PRI-9W-5000K-L5	9	.375A	5000	L5	1215	44	44.5
PRI-12W-5000K-L5	12	.500A	5000	L5	1620	44	44.5
PRI-3W-6500K-L5	3	.125A	6500	L5	405	44	44.5
PRI-6W-6500K-L5	6	.250A	6500	L5	810	44	44.5
PRI-9W-6500K-L5	9	.375A	6500	L5	1215	44	44.5
PRI-12W-6500K-L5	12	.500A	6500	L5	1620	44	44.5

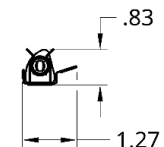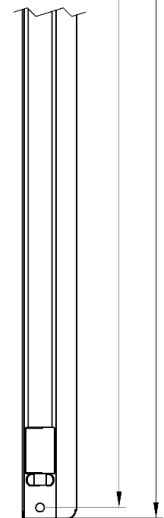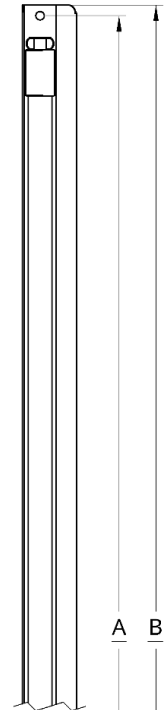

PRI™ is a trademark of Vision Engineering Inc. Patent pending.



CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.




Precision Reflective Illumination

PRJ™ is a trademark of Vision Engineering Inc. Patent pending.



Product Specifications End Fixture

Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRJ-3W-3500K-L6	3	.125A	3500	L6	405	52	52.5
PRJ-6W-3500K-L6	6	.250A	3500	L6	810	52	52.5
PRJ-9W-3500K-L6	9	.375A	3500	L6	1215	52	52.5
PRJ-12W-3500K-L6	12	.500A	3500	L6	1620	52	52.5
PRJ-3W-4000K-L6	3	.125A	4000	L6	405	52	52.5
PRJ-6W-4000K-L6	6	.250A	4000	L6	810	52	52.5
PRJ-9W-4000K-L6	9	.375A	4000	L6	1215	52	52.5
PRJ-12W-4000K-L6	12	.500A	4000	L6	1620	52	52.5
PRJ-3W-5000K-L6	3	.125A	5000	L6	405	52	52.5
PRJ-6W-5000K-L6	6	.250A	5000	L6	810	52	52.5
PRJ-9W-5000K-L6	9	.375A	5000	L6	1215	52	52.5
PRJ-12W-5000K-L6	12	.500A	5000	L6	1620	52	52.5
PRJ-3W-6500K-L6	3	.125A	6500	L6	405	52	52.5
PRJ-6W-6500K-L6	6	.250A	6500	L6	810	52	52.5
PRJ-9W-6500K-L6	9	.375A	6500	L6	1215	52	52.5
PRJ-12W-6500K-L6	12	.500A	6500	L6	1620	52	52.5
Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRJ-3W-3500K-L7	3	.125A	3500	L7	405	60	60.5
PRJ-6W-3500K-L7	6	.250A	3500	L7	810	60	60.5
PRJ-9W-3500K-L7	9	.375A	3500	L7	1215	60	60.5
PRJ-12W-3500K-L7	12	.500A	3500	L7	1620	60	60.5
PRJ-3W-4000K-L7	3	.125A	4000	L7	405	60	60.5
PRJ-6W-4000K-L7	6	.250A	4000	L7	810	60	60.5
PRJ-9W-4000K-L7	9	.375A	4000	L7	1215	60	60.5
PRJ-12W-4000K-L7	12	.500A	4000	L7	1620	60	60.5
PRJ-3W-5000K-L7	3	.125A	5000	L7	405	60	60.5
PRJ-6W-5000K-L7	6	.250A	5000	L7	810	60	60.5
PRJ-9W-5000K-L7	9	.375A	5000	L7	1215	60	60.5
PRJ-12W-5000K-L7	12	.500A	5000	L7	1620	60	60.5
PRJ-3W-6500K-L7	3	.125A	6500	L7	405	60	60.5
PRJ-6W-6500K-L7	6	.250A	6500	L7	810	60	60.5
PRJ-9W-6500K-L7	9	.375A	6500	L7	1215	60	60.5
PRJ-12W-6500K-L7	12	.500A	6500	L7	1620	60	60.5

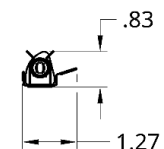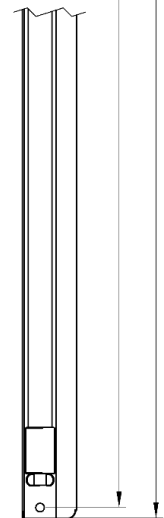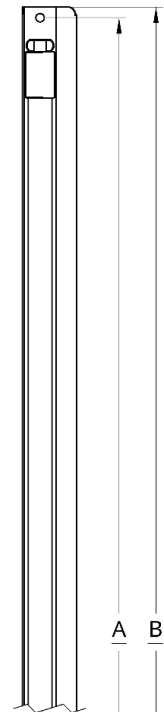

PRJ™ is a trademark of Vision Engineering Inc. Patent pending.



CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.




Precision Reflective Illumination

PRI™ is a trademark of Vision Engineering Inc. Patent pending.



Product Specifications End Fixture

Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-6W-3500K-L8	6	.250A	3500	L8	810	68	68.5
PRI-9W-3500K-L8	9	.375A	3500	L8	1215	68	68.5
PRI-12W-3500K-L8	12	.500A	3500	L8	1620	68	68.5
PRI-6W-4000K-L8	6	.250A	4000	L8	810	68	68.5
PRI-9W-4000K-L8	9	.375A	4000	L8	1215	68	68.5
PRI-12W-4000K-L8	12	.500A	4000	L8	1620	68	68.5
PRI-6W-5000K-L8	6	.250A	5000	L8	810	68	68.5
PRI-9W-5000K-L8	9	.375A	5000	L8	1215	68	68.5
PRI-12W-5000K-L8	12	.500A	5000	L8	1620	68	68.5
PRI-6W-6500K-L8	6	.250A	6500	L8	810	68	68.5
PRI-9W-6500K-L8	9	.375A	6500	L8	1215	68	68.5
PRI-12W-6500K-L8	12	.500A	6500	L8	1620	68	68.5
						A	B
Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-6W-3500K-L9	6	.250A	3500	L9	810	72	72.5
PRI-9W-3500K-L9	9	.375A	3500	L9	1215	72	72.5
PRI-12W-3500K-L9	12	.500A	3500	L9	1620	72	72.5
PRI-6W-4000K-L9	6	.250A	4000	L9	810	72	72.5
PRI-9W-4000K-L9	9	.375A	4000	L9	1215	72	72.5
PRI-12W-4000K-L9	12	.500A	4000	L9	1620	72	72.5
PRI-6W-5000K-L9	6	.250A	5000	L9	810	72	72.5
PRI-9W-5000K-L9	9	.375A	5000	L9	1215	72	72.5
PRI-12W-5000K-L9	12	.500A	5000	L9	1620	72	72.5
PRI-6W-6500K-L9	6	.250A	6500	L9	810	72	72.5
PRI-9W-6500K-L9	9	.375A	6500	L9	1215	72	72.5
PRI-12W-6500K-L9	12	.500A	6500	L9	1620	72	72.5

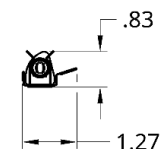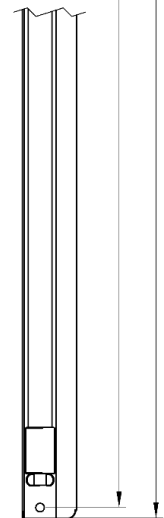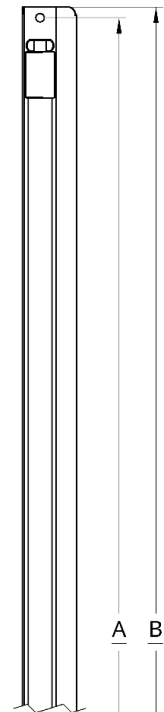

**VISION
ENGINEERING**


PRI™ is a trademark of Vision Engineering Inc. Patent pending.



CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.



Precision Reflective Illumination

PRI™ is a trademark of Vision Engineering Inc. Patent pending.



Product Specifications Center Fixture

Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-6W-3500K-L4-C	6	.250A	3500	L4	810	36	36.5
PRI-12W-3500K-L4-C	12	.500A	3500	L4	1620	36	36.5
PRI-18W-3500K-L4-C	18	.750A	3500	L4	2430	36	36.5
PRI-24W-3500K-L4-C	24	1.00A	3500	L4	3240	36	36.5
PRI-6W-4000K-L4-C	6	.250A	4000	L4	810	36	36.5
PRI-12W-4000K-L4-C	12	.500A	4000	L4	1620	36	36.5
PRI-18W-4000K-L4-C	18	.750A	4000	L4	2430	36	36.5
PRI-24W-4000K-L4-C	24	1.00A	4000	L4	3240	36	36.5
PRI-6W-5000K-L4-C	6	.250A	5000	L4	810	36	36.5
PRI-12W-5000K-L4-C	12	.500A	5000	L4	1620	36	36.5
PRI-18W-5000K-L4-C	18	.750A	5000	L4	2430	36	36.5
PRI-24W-5000K-L4-C	24	1.00A	5000	L4	3240	36	36.5
PRI-6W-6500K-L4-C	6	.250A	6500	L4	810	36	36.5
PRI-12W-6500K-L4-C	12	.500A	6500	L4	1620	36	36.5
PRI-18W-6500K-L4-C	18	.750A	6500	L4	2430	36	36.5
PRI-24W-6500K-L4-C	24	1.00A	6500	L4	3240	36	36.5
Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-3W-3500K-L5-C	6	.250A	3500	L5	810	44	44.5
PRI-6W-3500K-L5-C	12	.500A	3500	L5	1620	44	44.5
PRI-9W-3500K-L5-C	18	.750A	3500	L5	2430	44	44.5
PRI-12W-3500K-L5-C	24	1.00A	3500	L5	3240	44	44.5
PRI-3W-4000K-L5-C	6	.250A	4000	L5	810	44	44.5
PRI-6W-4000K-L5-C	12	.500A	4000	L5	1620	44	44.5
PRI-9W-4000K-L5-C	18	.750A	4000	L5	2430	44	44.5
PRI-12W-4000K-L5-C	24	1.00A	4000	L5	3240	44	44.5
PRI-3W-5000K-L5-C	6	.250A	5000	L5	810	44	44.5
PRI-6W-5000K-L5-C	12	.500A	5000	L5	1620	44	44.5
PRI-9W-5000K-L5-C	18	.750A	5000	L5	2430	44	44.5
PRI-12W-5000K-L5-C	24	1.00A	5000	L5	3240	44	44.5
PRI-3W-6500K-L5-C	6	.250A	6500	L5	810	44	44.5
PRI-6W-6500K-L5-C	12	.500A	6500	L5	1620	44	44.5
PRI-9W-6500K-L5-C	18	.750A	6500	L5	2430	44	44.5
PRI-12W-6500K-L5-C	24	1.00A	6500	L5	3240	44	44.5

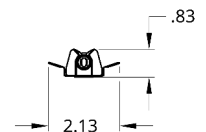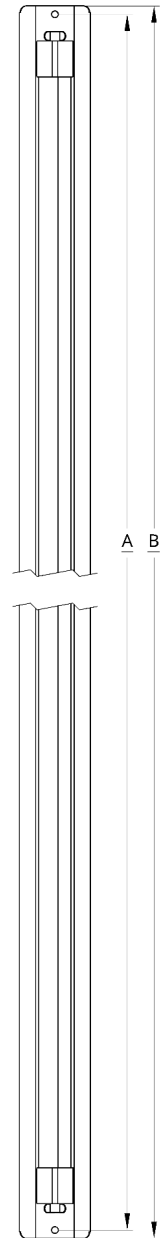


PRI™ is a trademark of Vision Engineering Inc. Patent pending.



CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.



Precision Reflective Illumination

PRI™ is a trademark of Vision Engineering Inc. Patent pending.



Product Specifications Center Fixture


Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-6W-3500K-L6-C	6	.250A	3500	L6	810	52	52.5
PRI-12W-3500K-L6-C	12	.500A	3500	L6	1620	52	52.5
PRI-18W-3500K-L6-C	18	.750A	3500	L6	2430	52	52.5
PRI-24W-3500K-L6-C	24	1.00A	3500	L6	3240	52	52.5
PRI-6W-4000K-L6-C	6	.250A	4000	L6	810	52	52.5
PRI-12W-4000K-L6-C	12	.500A	4000	L6	1620	52	52.5
PRI-18W-4000K-L6-C	18	.750A	4000	L6	2430	52	52.5
PRI-24W-4000K-L6-C	24	1.00A	4000	L6	3240	52	52.5
PRI-6W-5000K-L6-C	6	.250A	5000	L6	810	52	52.5
PRI-12W-5000K-L6-C	12	.500A	5000	L6	1620	52	52.5
PRI-18W-5000K-L6-C	18	.750A	5000	L6	2430	52	52.5
PRI-24W-5000K-L6-C	24	1.00A	5000	L6	3240	52	52.5
PRI-6W-6500K-L6-C	6	.250A	6500	L6	810	52	52.5
PRI-12W-6500K-L6-C	12	.500A	6500	L6	1620	52	52.5
PRI-18W-6500K-L6-C	18	.750A	6500	L6	2430	52	52.5
PRI-24W-6500K-L6-C	24	1.00A	6500	L6	3240	52	52.5
Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-6W-3500K-L7-C	6	.250A	3500	L7	810	60	60.5
PRI-12W-3500K-L7-C	12	.500A	3500	L7	1620	60	60.5
PRI-18W-3500K-L7-C	18	.750A	3500	L7	2430	60	60.5
PRI-24W-3500K-L7-C	24	1.00A	3500	L7	3240	60	60.5
PRI-6W-4000K-L7-C	6	.250A	4000	L7	810	60	60.5
PRI-12W-4000K-L7-C	12	.500A	4000	L7	1620	60	60.5
PRI-18W-4000K-L7-C	18	.750A	4000	L7	2430	60	60.5
PRI-24W-4000K-L7-C	24	1.00A	4000	L7	3240	60	60.5
PRI-6W-5000K-L7-C	6	.250A	5000	L7	810	60	60.5
PRI-12W-5000K-L7-C	12	.500A	5000	L7	1620	60	60.5
PRI-18W-5000K-L7-C	18	.750A	5000	L7	2430	60	60.5
PRI-24W-5000K-L7-C	24	1.00A	5000	L7	3240	60	60.5
PRI-6W-6500K-L7-C	6	.250A	6500	L7	810	60	60.5
PRI-12W-6500K-L7-C	12	.500A	6500	L7	1620	60	60.5
PRI-18W-6500K-L7-C	18	.750A	6500	L7	2430	60	60.5
PRI-24W-6500K-L7-C	24	1.00A	6500	L7	3240	60	60.5

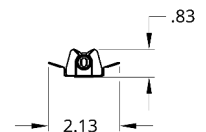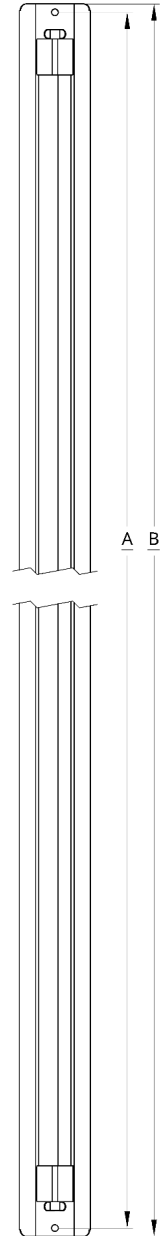

CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.



Precision Reflective Illumination

PRI™ is a trademark of Vision Engineering Inc. Patent pending.



Product Specifications Center Fixture

Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-12W-3500K-L8-C	12	.500A	3500	L8	1620	68	68.5
PRI-18W-3500K-L8-C	18	.750A	3500	L8	2430	68	68.5
PRI-24W-3500K-L8-C	24	1.00A	3500	L8	3240	68	68.5
PRI-12W-4000K-L8-C	12	.500A	4000	L8	1620	68	68.5
PRI-18W-4000K-L8-C	18	.750A	4000	L8	2430	68	68.5
PRI-24W-4000K-L8-C	24	1.00A	4000	L8	3240	68	68.5
PRI-12W-5000K-L8-C	12	.500A	5000	L8	1620	68	68.5
PRI-18W-5000K-L8-C	18	.750A	5000	L8	2430	68	68.5
PRI-24W-5000K-L8-C	24	1.00A	5000	L8	3240	68	68.5
PRI-12W-6500K-L8-C	12	.500A	6500	L8	1620	68	68.5
PRI-18W-6500K-L8-C	18	.750A	6500	L8	2430	68	68.5
PRI-24W-6500K-L8-C	24	1.00A	6500	L8	3240	68	68.5
Part Number	Wattage (W)	Amps	CCT (K)	Size	Lumens	A	B
						Mounting Hole Distance (inches)	Overall Length (inches)
PRI-12W-3500K-L9-C	12	.500A	3500	L9	1620	72	72.5
PRI-18W-3500K-L9-C	18	.750A	3500	L9	2430	72	72.5
PRI-24W-3500K-L9-C	24	1.00A	3500	L9	3240	72	72.5
PRI-12W-4000K-L9-C	12	.500A	4000	L9	1620	72	72.5
PRI-18W-4000K-L9-C	18	.750A	4000	L9	2430	72	72.5
PRI-24W-4000K-L9-C	24	1.00A	4000	L9	3240	72	72.5
PRI-12W-5000K-L9-C	12	.500A	5000	L9	1620	72	72.5
PRI-18W-5000K-L9-C	18	.750A	5000	L9	2430	72	72.5
PRI-24W-5000K-L9-C	24	1.00A	5000	L9	3240	72	72.5
PRI-12W-6500K-L9-C	12	.500A	6500	L9	1620	72	72.5
PRI-18W-6500K-L9-C	18	.750A	6500	L9	2430	72	72.5
PRI-24W-6500K-L9-C	24	1.00A	6500	L9	3240	72	72.5

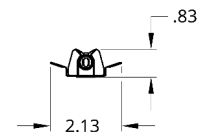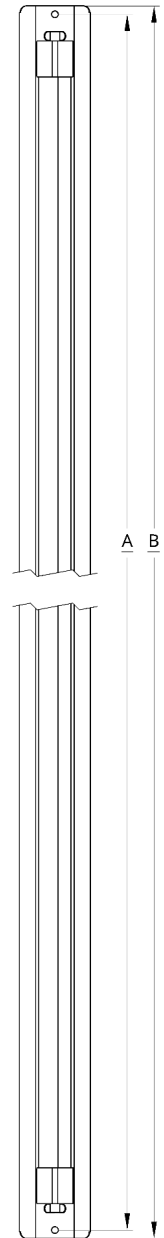

CONFIDENTIAL INFORMATION This document contains proprietary and confidential information belonging to Vision Engineering Inc.. It is provided under the terms of a Non-Disclosure Agreement (NDA) and must not be reproduced, distributed, or disclosed to any third party without prior written permission from Vision Engineering Inc. Unauthorized use is strictly prohibited.